


## Mounting the mirror cone



- 2x wrench 10 mm
- sandpaper
- degreaser
- sealant or two-component filling adhesive
- glove/cloth

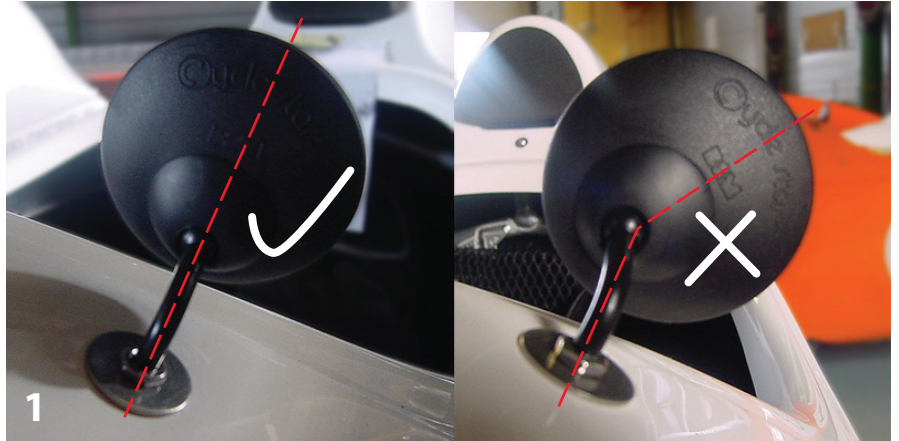

Adjust the mirror before dismantling it, adjustment will be limited after the cone is glued on.  
Make sure the stem and mirror are in line like this (Picture 1).

The mirror cone will be glued with sealant. We use a polymer sealant but you can use a two-component adhesive as well.

Dismount the mirror (Picture 2).




Sand the side of the mirror with rough sandpaper (Picture 3). And if not already done sand the inside of the mirror cone as well.



Remove the dust and degrease it.

Apply a thin layer of the adhesive inside the mirror cone (Picture 4).

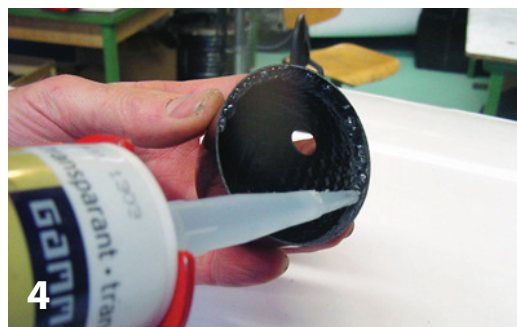

And do the same by using your finger on the side of the mirror (Picture 5).



Place the mirror inside the cone and remove the excess adhesive with a cloth (Picture 6).



Place it on a flat surface, mirror facing down (Picture 7). Let it cure before you mount it back on your velomobile. The curing time should be written on the package of your adhesive.

